



# WATERLESS CONCRETE CLEANER CLEANING INSTRUCTIONS

**DRY APPLICATION** 



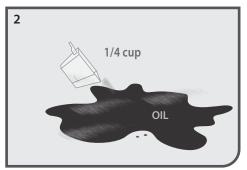



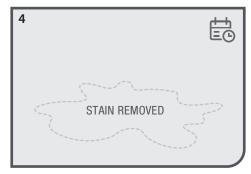

# **PREPARATION**

1. First remove any trash or debris from application area.

#### TO MIX

2. Using provided scoop, apply EXIMO® directly onto oil stain. 1/4 cup will cover up to 55 sq. ft., the average size of one fuel lane or parking space.

## **TO APPLY**

- 3. Keeping broom in contact with surface, sweep EXIMO both forward and backwards across the oil stain. Next, sweep across the initial line until EXIMO is fully dispersed.
- 4. Oil stains are removed in 4-6 weeks. Reapply weekly to avoid future stains.

**Note:** Applying the correct amount of EXIMO should leave no excess - if product remains, continue sweeping until EXIMO is fully dispersed.







**Note:** EXIMO breaks down hydrocarbon chains within the petroleum stains on the surface, and deep inside the pours of the concrete, restoring the surface to its original appearance.





### **EFFECTIVE ON**

- Concrete
- Forecourts
- Parking lots
- Sidewalks
- Driveways
- Pavers
- Drive Thrus

# **FREQUENCY**

Apply 1-2 times per week.

# TASK DURATION 🖒

1-2 minutes per task when used weekly.

#### TIP

Use an application schedule for best results.

#### **RESULTS**

Stains are reduced within 2-3 weeks and fully treated and removed in 4-6 weeks.





