

WATERLESS CONCRETE CLEANER CLEANING INSTRUCTIONS

WET APPLICATION



- Concrete
- Forecourts
- Parking lots
- Sidewalks
- Driveways
- Pavers
- Drive Thrus

FREQUENCY

Apply 1-2 times per week.

TASK DURATION Ġ

1-2 minutes per task when used weekly.

TIP


Use an application schedule for best results.

RESULTS

Stains are reduced within 2-3 weeks and fully treated and removed in 4-6 weeks.





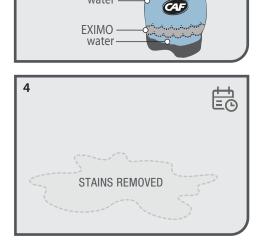

1 gal.

1 cup

water

PREPARATION

1. First remove any trash or debris from application area.

TO MIX

2. Add water to a 2 gallon sprayer tank. Using scoop provided, add 1 cup of EXIMO[®] to 1 gallon of water and mix thoroughly. Afterward, attach pump handle and begin to pressurize the sprayer tank.

2

TO APPLY

3. Keep sprayer 12 in. from the surface and begin applying EXIMO using even strides on the surface as you walk. Agitate sprayer often to avoid product settlement and reduce clogging.

4. Oil stains are removed in 4-6 weeks. Reapply weekly to avoid future stains.

Note: Applying the correct amount of EXIMO should leave no excess - if product remains, continue sweeping until EXIMO is fully dispersed.



Note: EXIMO breaks down hydrocarbon chains within the petroleum stains on the surface, and deep inside the pours of the concrete, restoring the surface to its original appearance.





FOR TRAINING VIDEOS AND PRODUCT INFORMATION: www.mycaf.com/training © (888) 737-0025



6.50